

# LEDEP09

#### INSTALLATION INSTRUCTIONS

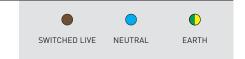

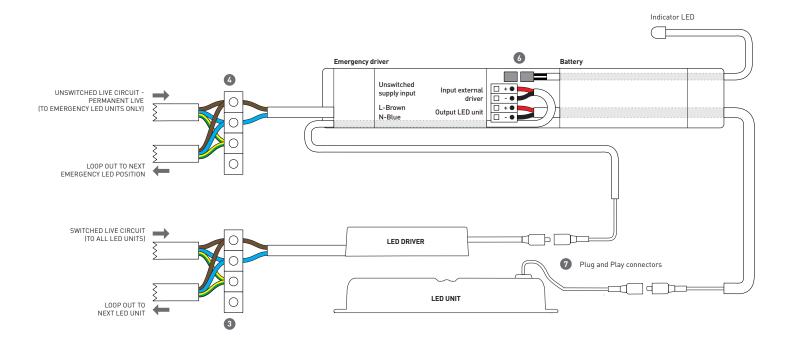

See overleaf for single mains circuit option (1 x 4-core cable)



## Installation

- 1. Refer to the LED unit installation instructions, install all non-emergency LED units.
- For each emergency light position, drill an 18mm hole close to the LED unit. This is for the LEDEP09 indicator LED.
- SWITCHED LIVE CIRCUIT Connect the LED driver mains cable to the switched live supply.
- UNSWITCHED LIVE CIRCUIT Connect the LEDEP09 live and neutral terminals to the unswitched live supply.
- Fit end covers to both ends of the LEDEP09.
- Connect the battery pack to the LEDEP09 (plug &play).
- Connect the LEDEP09 output wires with plug and play connectors to the relevant connectors of the LED unit and LED driver.
- Feed the junction boxes/connectors and LEDEP09 though the ceiling hole.
- Feed the indicator LED down through the hole.
- 10. Fit the indicator housing to the indicator LED, then press the housing into the ceiling.

  Note: If the drilled hole is slightly larger than 18mm, it may be necessary to apply a little adhesive to the housing to secure it.
- 11. Fit the LED unit into the ceiling.
- 12. See overleaf for commissioning.






# LEDEP09

#### INSTALLATION INSTRUCTIONS



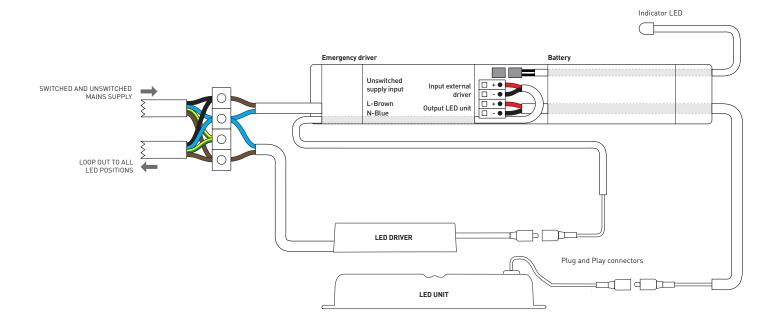



### **Emergency Pack Commissioning**

- Install unit in ceiling according to the instructions.
- Provide an uninterrupted mains power supply for 24 hours.
- Check that the indicator LED light is lit. This confirms that the batteries are charging.
- 4. Remove the mains supply the lamp will operate under battery power for 3 hours minimum.
- Restore mains power to the unit, check light functions correctly.

### Note

- In normal operation, the green LED will be constantly lit to indicate that the battery is charging. If the green LED is ever not lit, investigate immediately and rectify the fault.
- Periodic testing of the unit must be performed in line with the appropriate regulations.

Battery must be replaced when the unit no longer meet it's rated emergency duration, or if a battery fault occurs. Contact Collingwood Lighting for a suitable replacement.





t +33 [0] 4 816 816 10 f +33 [0] 4 816 816 11 e ventes@collingwoodgroup.com w collingwoodlighting.com