




1

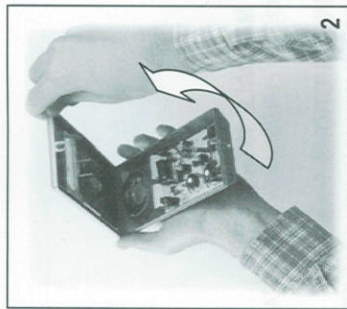

2

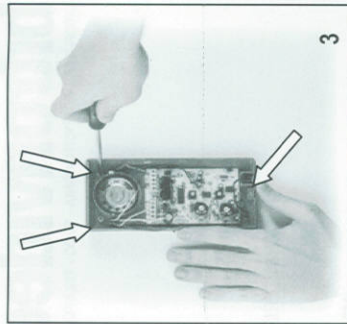

3

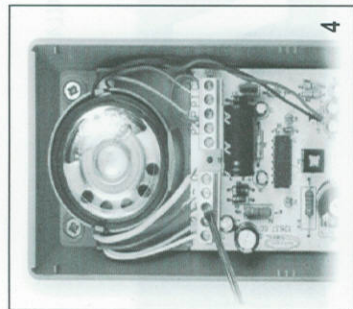


4



5

VOLUME ESTERNO  
EXTERNAL VOLUME  
VOLUME EXTERIEUR


VOLUME INTERNO  
INTERNAL VOLUME  
VOLUME INTERIEUR

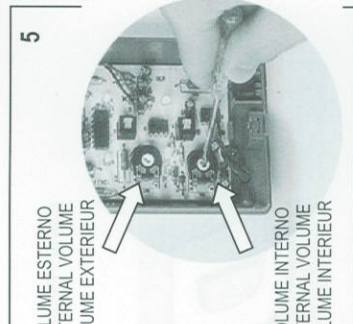


7



8

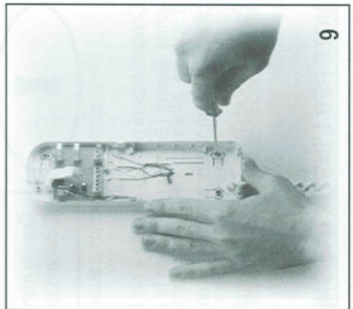


9

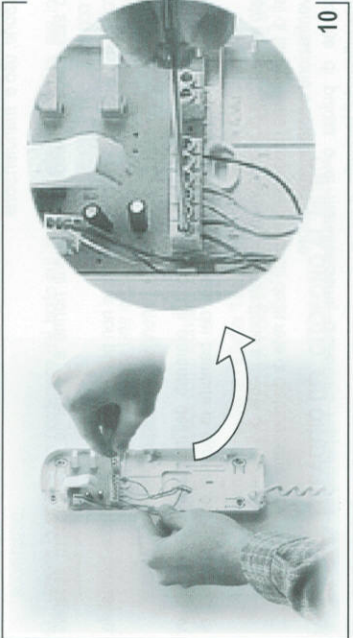


10



11

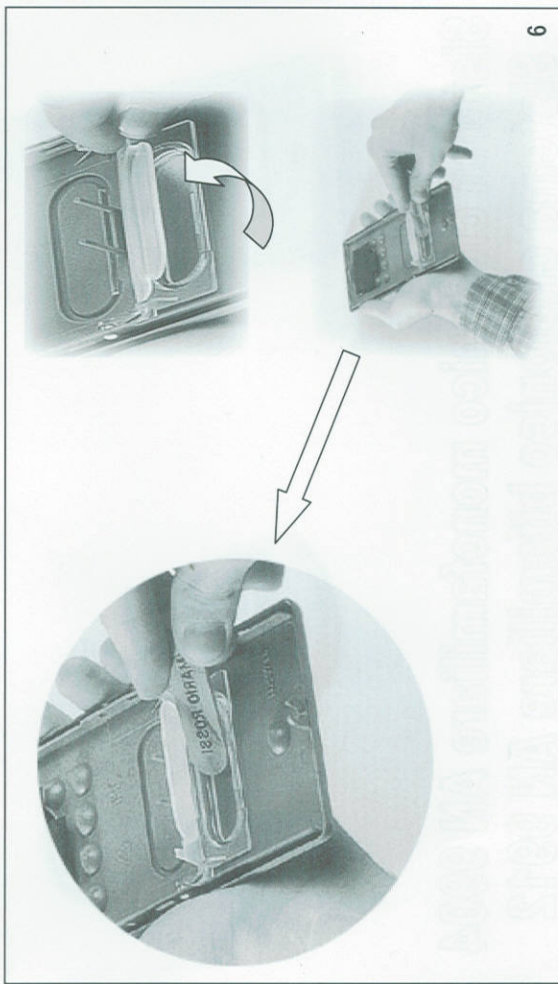

6

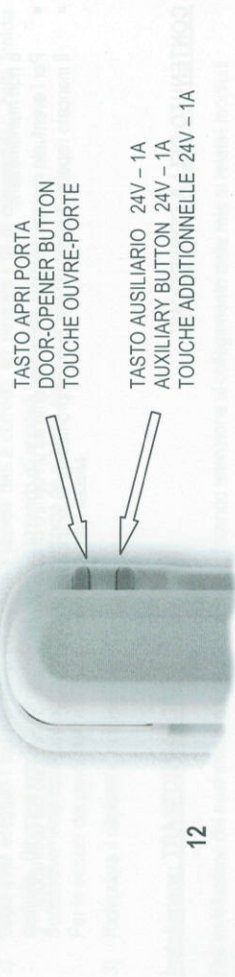

12

TASTO APRI PORTA  
DOOR-OPENER BUTTON  
TOUCHE OUVRE-PORTE

TASTO AUSILIARIO 24V - 1A  
AUXILIARY BUTTON 24V - 1A  
TOUCHE ADDITIONNELLE 24V - 1A

CONDUTTORE - WIRE - CONDUCTEUR		DISTANZA - DISTANCES							
		50 m		100 m		200 m		300 m	
RIF.	FUNZIONE - FUNCTION - FONCTION	Ø	mm <sup>2</sup>	Ø	mm <sup>2</sup>	Ø	mm <sup>2</sup>	Ø	mm <sup>2</sup>
1	Altoparlante - Loudspeaker - Haut-parleur	0,6	0,3	0,8	0,5	1	0,75	1,4	1,5
2	Microfono - Microphone - Microphone	0,6	0,3	0,8	0,5	1	0,75	1,4	1,5
6	Comune fonia - Speech common - Commun phonie	0,8	0,5	1	0,75	1,2	1	1,4	1,5
9	Apriporta - Door opener - Gâche	0,8	0,5	1	0,75	1,2	1	1,4	1,5
C7	Chiamata - Call - Appel	0,6	0,3	0,8	0,5	1	0,75	1,4	1,5
AU-AU	Tasto ausiliario - Auxiliary button - Touche additionnelle	0,8	0,5	1	0,8	1,2	1	1,4	1,6