 


## ESC080


- (FR) Contact auxiliaire
- (EN) Auxiliary contact
- (DE) Hilfsschalter
- (IT) Contatto ausiliario
- (ES) Contacto auxiliar
- (PT) Contacto auxiliar
- (NL) Hulpcontact
- (SV) Hjälpkontakt
- (DA) Hjaelpe kontakt
- (NO) Hjelpekontaktblokk
- (AR) ملحق موصل



ESC080	
	Ie $\mu$ 6A 250 V~ AC 12 Ie $\mu$ 2A 250 V~ AC 15
T °C	-5 / +40 °C

mini	1 mm <sup>2</sup>	1,5 mm <sup>2</sup>
maxi	6 mm <sup>2</sup>	6 mm <sup>2</sup>


- (FR) Signalisation
- (EN) Indication
- (DE) Meldung
- (IT) Segnalazione
- (ES) Senalización
- (PT) Sinalização
- (NL) Signalisatie
- (SV) Hjälpkontakt till arbets, strom relä och kontaktore
- (DA) Indication
- (NO) Signaliserin
- (AR) إشارة

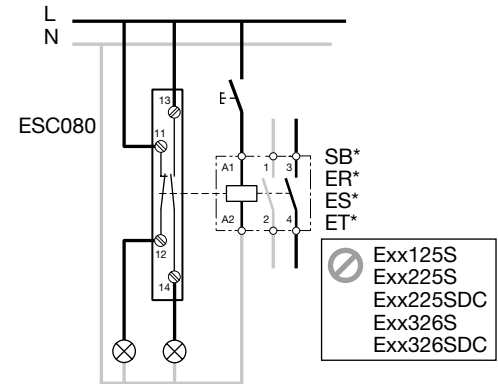

- Exx125S
- Exx225S
- Exx225SDC
- Exx326S
- Exx326SDC

ESC080

SB\*

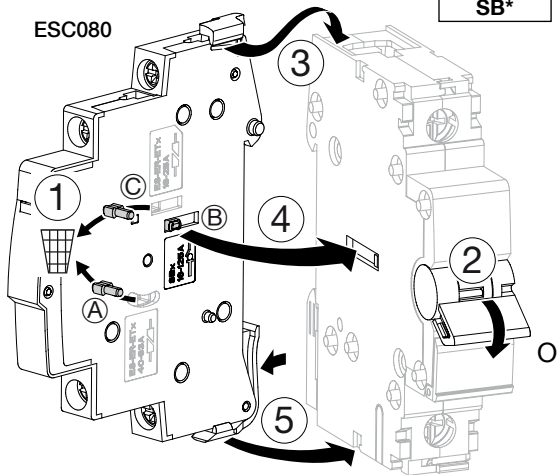


ESC080

ER\*, ES\*, ET\*


16-25 A

- Exx125S
- Exx225S
- Exx225SDC
- Exx326S
- Exx326SDC

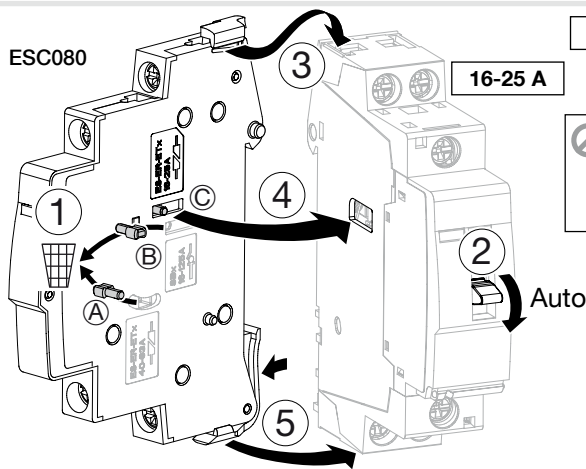

ESC080

40-63 A

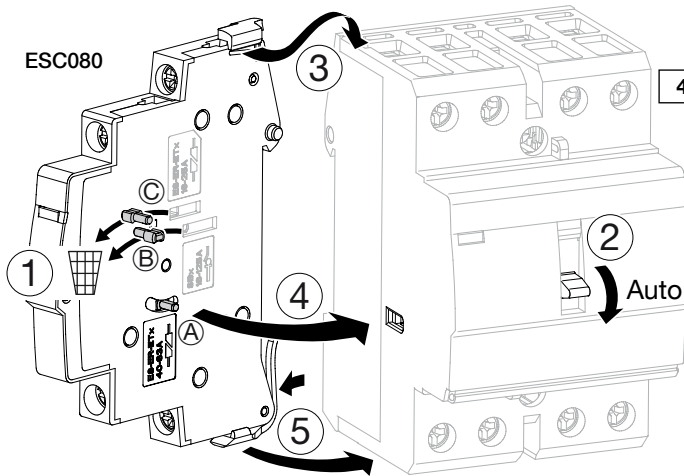

① { ER\* - ES\* - ET\* 16-25 : A+B }  
 { ER\* - ES\* - ET\* 40-63 : B+C }  
 SB\* : A+C } 