


**Céliane™
Shaver socket**


Cat. No.: 671 59

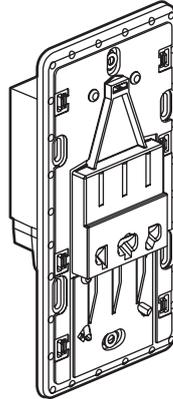



1. USE

Equipped with a circuit separation transformer to isolate the user from the mains supply.
Socket outlets for different international standards: Euro, US, British standard, Australian.
The frame is integrated.

2. RANGE


	Designation	Cat. No.	Fixation method	Connection method	Weight (g)
	Shaver socket	671 59	With screws	Auto	530

4. OVERALL DIMENSION

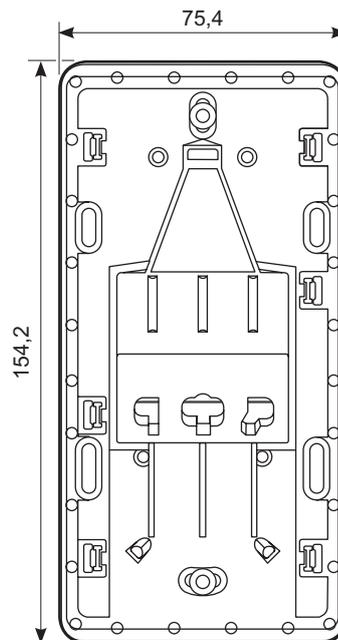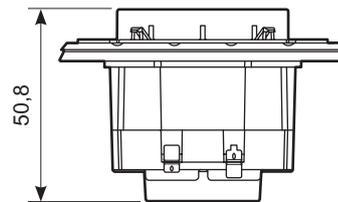

3. PREPARATION


The mechanism can be flush-mounted or surface-mounted in a 2posts flush-mounted box or surface-mounted box (802 42) depth 50mm.

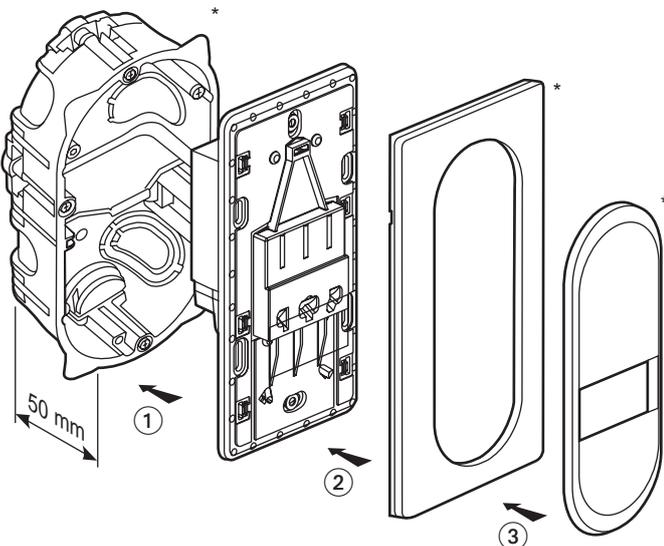

* not supplied with the mechanism

5. CONNECTION

Connection method: automatic
Capacity: 2 x 2.5 mm² or 2 x 1.5 mm²
Stripping length: 13 mm

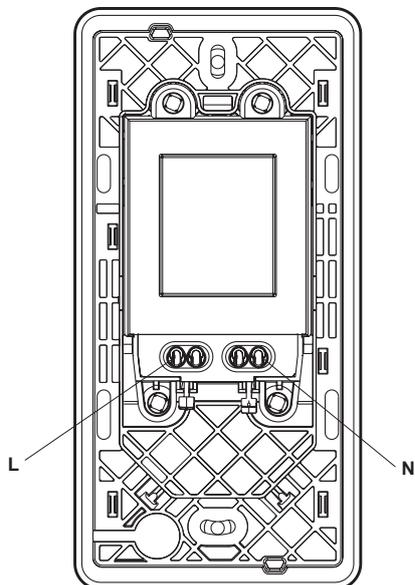

6. TECHNICAL CHARACTERISTICS

6.1 Mechanical characteristics

Impact tests: IK 04
Protection by solid bodies/liquids: IP 24

6.2 Material characteristics

Plate: ABS
Cover plate: ABS
Frame: PC

6.3 Electrical characteristics

Protected against overloads and short circuits by built-in thermal relay limiting the available power to 20 VA.
Power supply: 230 V and 1 output 120/230 V
Frequency: 50/60 Hz.
Self-extinguishing: 850° C / 30 s.

6.4 Climatic characteristics

Storage and operating temperatures: - 5°C to + 40°C

7. CLEANING

Surface cleaning with a cloth.
Do not use: acetone, tar remover, trichloroethylene.

7.1 Resistance to cleaning agents

Hexane (EN 60669-1), methylated spirits, soapy water, diluted ammonia, diluted pure bleach 10%, glass cleaning substance, pre-impregnated wipes.

7.2 Resistance to hospital-type cleaning agents

Resistance to the following agents: Anios, Surfanios, Bactilysine, Hydrogen peroxyde (35%).

Caution: A preliminary test should be carried out if other specific cleaning products are to be used.